



Product Code: AJ-R1063

## **Interconnected Wall Controller**

### **Overview**

The Watchman AJ-R1063 is a portable wireless remote controller which can connect to the Watchman AJ-770SI4, AJ-770T4 and AJ-760SI\* smoke and heat alarms. The Wall Controller functions provide a more convenient way to control your interconnected alarm system and will help if your alarms are not very accessible.



### **Specifications**

- Wireless 433Mhz RF connected
- Easy installation
- Compact
- Portable or Wall Mounted
- 2 x AAA batteries (replaceable)

### **How to connect to alarms**

Place all alarms and wall controller together – they need to be within 1 metre of each other. You can choose either an alarm or wall controller to be the Master.

#### ***If the Wall Controller is the Master:***

1. Press and hold the 'TEST' button on the wall controller, wait for the LED to flash green 3 times, then release. The LED will continuously flash red for 1 minute.

2. All other devices will be paired automatically. When successfully paired, each device will beep once and the LED will be green for a period.
3. Once all devices in a network have been paired, press (short) the 'TEST' on the wall controller to finish the pairing process. All devices will beep once, and the green LED light will turn off.

#### ***Adding a Wall Controller to an existing network:***

1. Clear data from the wall controller.
2. Choose any alarm from the existing network to be the Master by pressing and holding the 'TEST' button on the alarm, wait for the LED to flash green 3 times, then release. The LED will then flash red for 1 minute.
3. Press and hold the 'TEST' button on the wall controller, wait for the LED to flash green 2 times, then release.
4. Once the wall controller paired, on the Master alarm - press (short) the 'TEST' button to finish the pairing process.

#### ***If a smoke or heat alarm is the Master:***

Please follow the pairing process in the alarms User Guide. Ensure the wall controller is powered.

### **How to clear paired data**

For smoke or heat alarms: Press and hold the 'TEST' button, wait for the LED to flash green 4 times, then release.

For Wall Controller: Press and hold the 'TEST' button, wait for the LED to flash green 4 times, then release.

## Test, Hush & Locate Functions

**TEST:** To test a smoke alarm, you must be within 3 metres of the alarm. Point the wall controller towards the alarm and press the 'TEST' button once. After 3-5 seconds, the alarm should activate. The alarm will sound for 10 – 15 seconds and then stop. Do not press any of the buttons on the wall controller or smoke alarm during the test.

Ensure to test your smoke alarms monthly.

**CAUTION: Loud sound output will occur during testing.**

**LOCATE:** If the alarms are activated, you can locate the originally activated alarm by pressing the 'LOCATE' button on the wall controller. All other alarms will be silenced, however the originally activated alarm will continue to sound so to help identify which alarm or area the potential fire danger is located. If you have identified there is no danger to life or property, you can hush the originally activated alarm by either pressing the hush button on the alarm or pressing the 'HUSH' button on the wall controller.

**HUSH:** When all the alarms are sounding, you can hush all the alarms by pressing the 'HUSH' button. This will hush all alarms in the network. However for safety reasons, the originally activated alarm contains a memory function and will beep 3 beeps per minute. To clear the memory function, press (short) the 'TEST' button. All alarms will sound one by one for about 10-15 seconds, then all alarms will return to normal operating function.

**NOTE:** Before the Memory Function occurs, if the smoke alarm is still sensing smoke inside the

sensing chamber and has not dissipated completely, the alarm will continue to flash red. Once the chamber is clear and returned to Normal Operation, the Memory Function (3 beeps per min) will begin.

The other alarms within the network that were not the originally activated alarm, will flash orange to help indicate that alarm is not the originally activated alarm.

\*AJ-760SI alarms produced prior to July 2024 do not contain the memory function and will not perform the 3 beeps per minute if the HUSH function is pressed on the wall controller.

### Distributor:

If you have any questions about the product or require any assistance, please contact:

On Point Distribution Partners Ltd  
58a Poplar Lane  
Papamoa 3187  
New Zealand  
[www.watchmanalarms.co.nz](http://www.watchmanalarms.co.nz)